



1. Remove the engine under cover (page 58).
2. To drain the oil, remove the oil filler cap, crankcase drain plug (1) and sealing washer (2).

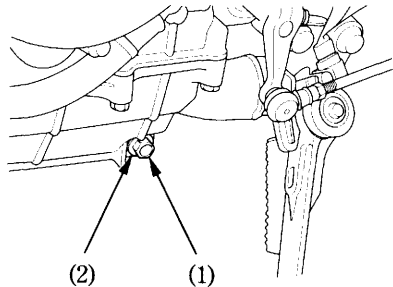

(1) Crankcase drain plug    (2) Sealing washer

3. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the oil filter.

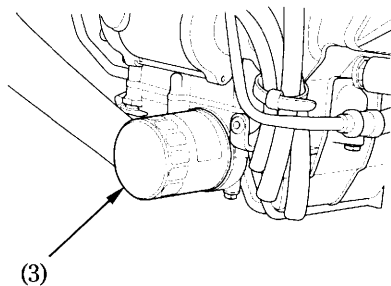

(3) Oil filter