


(3) Oil filter

**▲WARNING**

**\* A warmed-up engine and the oil in it are hot; be careful not to burn yourself.**

3. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out.
4. Apply a thin coat of engine oil to the new oil filter rubber seal (4).
5. Using a special tool and a torque wrench, install the new oil filter and tighten to a torque of:  
10 N·m (1.0 kgf·m , 7 lbf·ft)

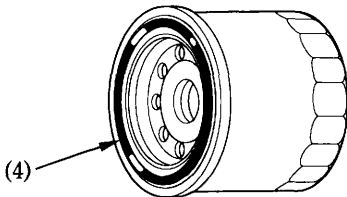

(4) Oil filter rubber seal