

Installation:

To install the rear wheel, reverse the removal procedure. Torque the axle nut to the specified torque.

Axle nut torque:

93 N·m (9.5 kgf·m , 69 lbf·ft)

CAUTION:

- * **When installing the wheel, carefully fit the brake disc between the brake pads to avoid damaging the pads.**

After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

▲WARNING

- * **If a torque wrench is not used for this installation, see your authorized Honda dealer as soon as possible to verify proper assembly.**