

ENGINE OIL

Engine Oil Level Check

Check the engine oil level each day before riding the motorcycle.


The level must be maintained between the upper (1) and lower (2) level marks in the inspection window (3).

1. Start the engine and let it idle for a few minutes. Make sure the low oil pressure indicator goes off. If the light remains on, stop the engine immediately.
2. Stop the engine and hold the motorcycle in an upright position on firm, level ground.
3. After a few minutes, check that the oil level is between the upper (1) and lower (2) level marks in the inspection window (3).
4. If required, remove the right lower cowl (5) (see page 56), the oil filler cap (4) and add the specified oil (see page 80) up to the upper level mark. Do not overfill.

5. Reinstall the oil filler cap and right lower cowl. Check for oil leaks.

NOTICE

Running the engine with insufficient oil pressure may cause serious engine damage.

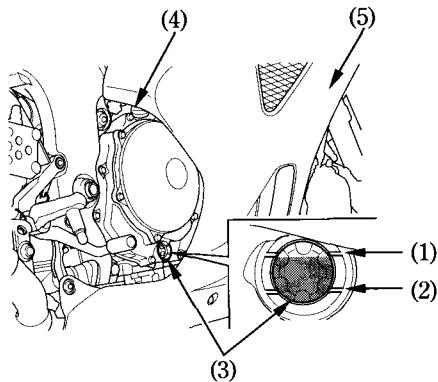

- | | |
|-----------------------|----------------------|
| (1) UPPER level mark | (4) Oil filler cap |
| (2) LOWER level mark | (5) Right lower cowl |
| (3) Inspection window | |