


INNER COWL

1. Remove the bolts (1).
2. Remove the clips (2).
3. Remove the inner cowl (3).

Installation:

- Installation can be done in the reverse order of removal.

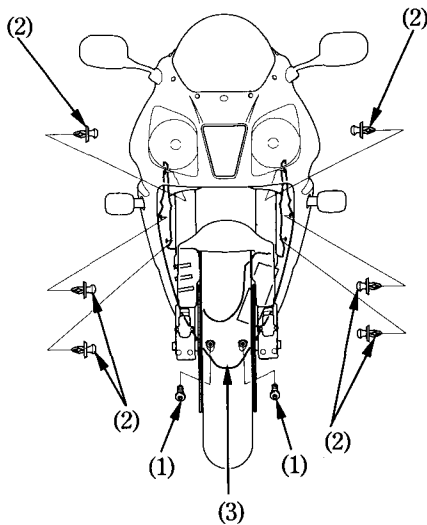

(1) Bolts
(2) Clips

(3) Inner cowl