




Battery

The battery is located in the battery box below the front seat.

Removal


1. Make sure the ignition switch is OFF.
2. Remove the front seat (page 78).
3. Remove the main fuse holder (1).

UNDER FRONT SEAT

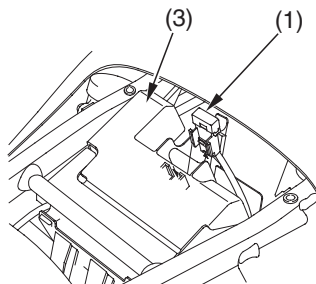

(1) main fuse holder

4. Unfasten the clips (2) to open the battery cover (3).

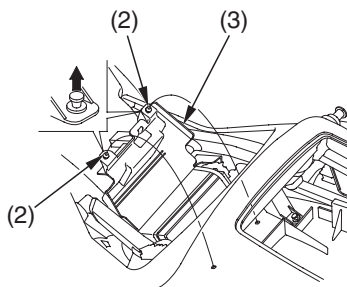

(2) clips
(3) battery cover

