


## Side Cover Removal

Refer to *Safety Precautions* on page 64 .

The right side cover must be removed to access the circuit fuses.

### RIGHT SIDE

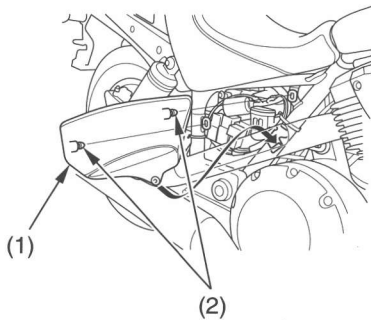

- (1) right side cover  
(2) prongs

### Right Side Cover Removal

1. Carefully pull the right side cover (1) out until the prongs (2) are clear of the frame grommets.
2. Remove the right side cover.

### Right Side Cover Installation

1. Position the cover so the prongs are aligned with the frame grommets.
2. Push both prongs in.