


Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on page 64 .

RIGHT SIDE

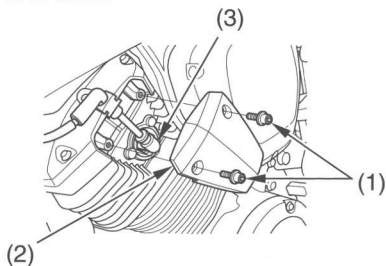

(1) bolts

(3) spark plug cap

(2) plug cover

1. Remove the bolts (1) and plug cover (2).
2. Clean any dirt from around the spark plug bases.
3. Disconnect the spark plug cap (3).
Take care to avoid damaging the spark plug wire when disconnecting the cap.
4. Using a spark plug wrench, remove the spark plugs.
5. Inspect the electrode and center porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug.
6. Make sure that the 1.1 mm wire-type feeler gauge does not insert between the spark plug gap (4). If the gauge is inserted into the gap, replace the plug with a new one.

(cont'd)