




Seat

Open the Seat:

1. Turn the handlebar pointed straight ahead.
2. Insert the ignition key (1) and turn it to the position of "SEAT FUEL" (2).
3. Push the "SEAT" (3) side of the fuel lid and seat opener switch (4).
4. Open the seat (5).

Close the Seat:

Close the seat, lower and push down until it locks. Make sure the seat is secure before riding.

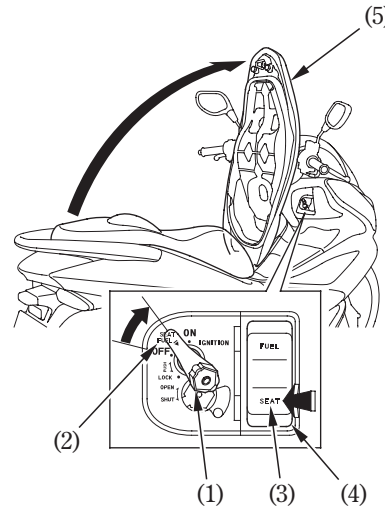

- | | |
|------------------|-------------------------------------|
| (1) Ignition key | (4) Fuel lid and seat opener switch |
| (2) "SEAT FUEL" | (5) Seat |
| (3) "SEAT" | |

