



### **Idling Stop System Operating Conditions**

Followings are requirements for the Idling Stop system to operate properly.

#### Before riding

- Put the side stand up.
- Warm up the engine. Idling Stop system does not operate, if the engine is not warmed up.
- Push the Idling Stop switch to the “**IDLING STOP**”.
- Ride the scooter at proper riding position. Idling Stop system is designed not to work when no load on the seat.

Ride the scooter at speed above 10 km/h (6 mph), to enable the Idling Stop system under above conditions.

#### After Stopping

- Close the throttle completely. Engine will not stop if the throttle is little opened.
- Stop the scooter completely. Engine will not stop if the speed is not at 0 km/h (0 mph).

