



| ITEM | FREQUENCY | WHICHEVER → COMES FIRST ↓ NOTE | ODOMETER READING [NOTE (1)] | | | | Refer to page | |
|------------------------------|-----------|--|-------------------------------|-----|-----|----|---------------------|-----|
| | | | × 1,000 km | 1 | 4 | 8 | | 12 |
| | | | × 1,000 mi | 0.6 | 2.5 | 5 | | 7.5 |
| | | MONTH | | 6 | 12 | 18 | | |
| * FUEL LINE | | | | I | I | I | — | |
| * THROTTLE OPERATION | | | | I | I | I | 107 | |
| AIR CLEANER | | NOTE (2) | EVERY 16,000 km (10,000 mi) R | | | | 95 | |
| CRANKCASE BREATHER | | NOTE (3) | | C | C | C | 96 | |
| SPARK PLUG | | | | | R | | 103 | |
| * VALVE CLEARANCE | | | I | I | I | I | — | |
| ENGINE OIL | | | R | | R | | 97 | |
| * ENGINE OIL STRAINER SCREEN | | | | | | C | 101 | |
| * ENGINE IDLE SPEED | | | I | I | I | I | — | |
| RADIATOR COOLANT | | NOTE (4) | | | I | | 33 | |
| * COOLING SYSTEM | | | | | I | | — | |

