



ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]				Refer to page
			× 1,000 km	4	8	12	
			× 1,000 mi	0.6	2.5	5	
		MONTH	6	12	18		
* DRIVE BELT			EVERY 8,000 km (5,000 mi) L, EVERY 24,000 km (15,000 mi) R				—
* FINAL DRIVE OIL		NOTE (4)					—
* BATTERY			I	I	I	I	111
BRAKE FLUID		NOTE (4)		I	I	I	28
BRAKE SHOES/PADS WEAR				I	I	I	109, 110
BRAKE SYSTEM			I	I	I	I	27, 109, 110
* BRAKE LIGHT SWITCH				I	I	I	—
* BRAKE LOCK OPERATION			I	I	I	I	—
* HEADLIGHT AIM				I	I	I	65
** CLUTCH SHOES WEAR					I		—
SIDE STAND				I	I	I	108
* SUSPENSION				I	I	I	107
* NUTS, BOLTS, FASTENERS			I		I		—
** WHEELS/TYRES				I	I	I	—
** STEERING HEAD BEARINGS			I			I	—

