



### **THROTTLE OPERATION**

Refer to the Safety Precautions on page 87 .

Check for smooth rotation of the throttle grip from the fully open to the fully closed position at both full steering positions.

### **FRONT AND REAR SUSPENSION INSPECTION**

Refer to the Safety Precautions on page 87 .

1. Check the front fork assembly by locking the front brake and pumping the fork up and down vigorously. Suspension action should be smooth and there must be no oil leakage.
2. Engine hanger bushing—this can be checked by pushing hard against the side of the rear wheel while the scooter is on the center stand and feeling for looseness of the engine hanger bushings.
3. Carefully inspect all front and rear suspension fasteners for tightness.

