 



# Indicators



**High coolant temperature indicator**  
If it comes on while riding:

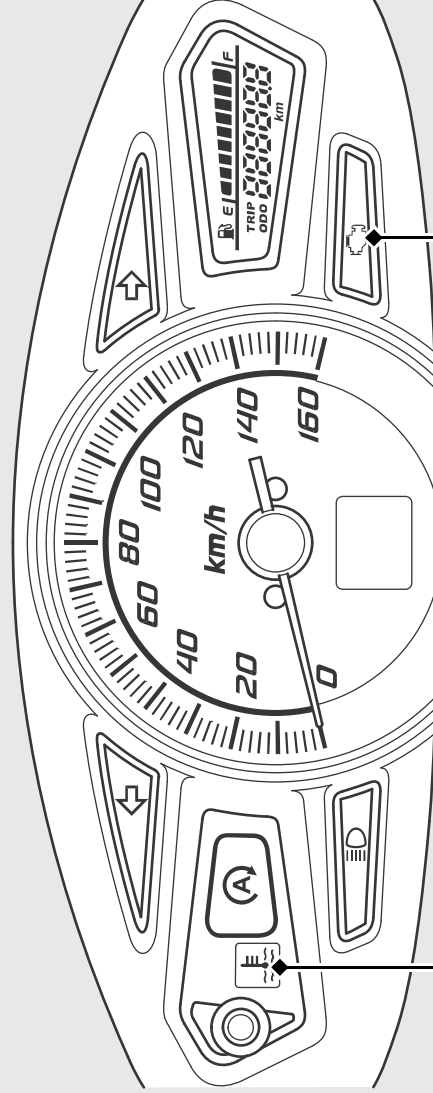

**PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned on.

**If it comes on while engine is running:  P.83**