

# Idling Stop System

This scooter is equipped with Idling Stop system. Idling Stop system is designed to help reduce the fuel consumption and noise, by idling stop while making a stop such as waiting at an intersection.

## Idling Stop System Operating Conditions

Followings are requirements for the Idling Stop system to operate properly.

### Before riding

- Put the side stand up.
- Warm up the engine.
- ▶ Idling Stop system does not operate, if the engine is not warmed up.
- Push the Idling Stop switch to IDLING STOP.

Ride the scooter at speed over 10 km/h (6 mph), to enable the Idling Stop system under above conditions.

