

Idling Stop System (Continued)

After Stopping

- Close the throttle completely.
 - ▶ Engine will not stop if the throttle is little opened.
- Stop the scooter completely.
 - ▶ Engine will not stop if the speed is not at 0 km/h (0 mph).

The engine is stopped by the Idling Stop system under above conditions. At the same time, the headlights get dark but stay on.

- ▶ When the engine is stopped by the Idling Stop system, the lit Idling Stop indicator changes to flash.
- ▶ While the engine is stopping by the Idling Stop system, if you push the Idling Stop switch to IDLING, the Idling Stop system will be cancelled.

Engine Does Not Stop by the Idling Stop System: 

NOTICE

Stopping by the Idling Stop system for a long time may cause battery discharge.

Idling Stop indicator

