


Battery Cover

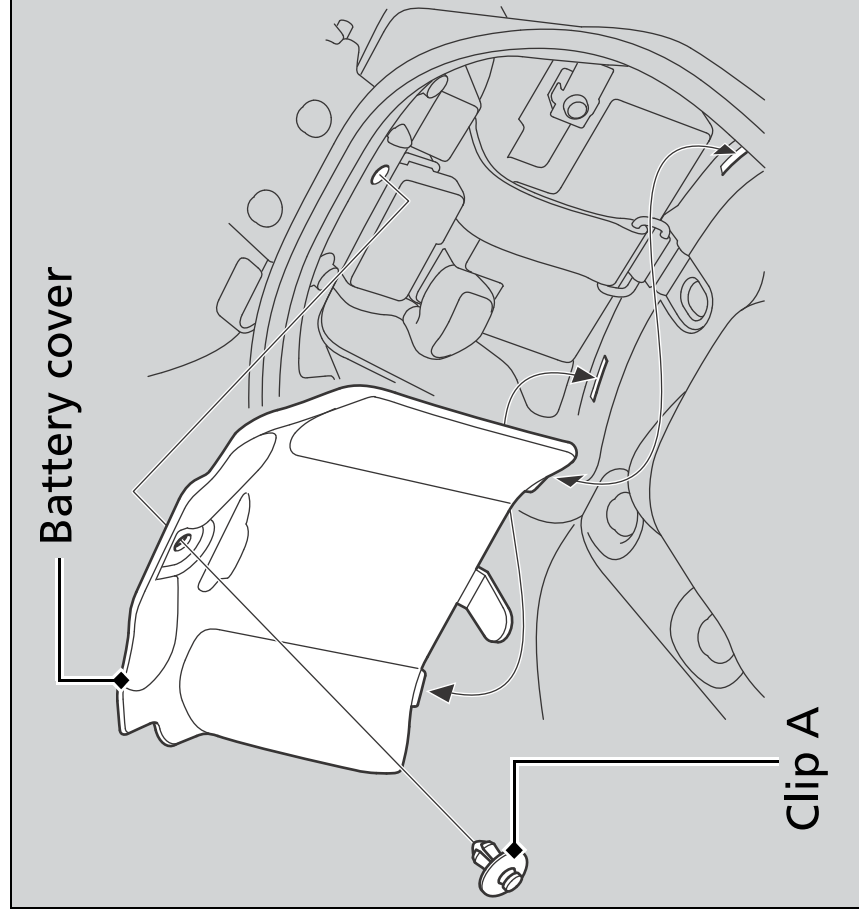

The battery cover must be removed to remove the battery, to service the fuse box fuses.

■ Removal

1. Open the seat. ➤ P. 38
2. Remove the clip A. ➤ P. 59
3. Remove the battery cover.

■ Installation

Install the parts in the reverse order of removal.