


# Battery

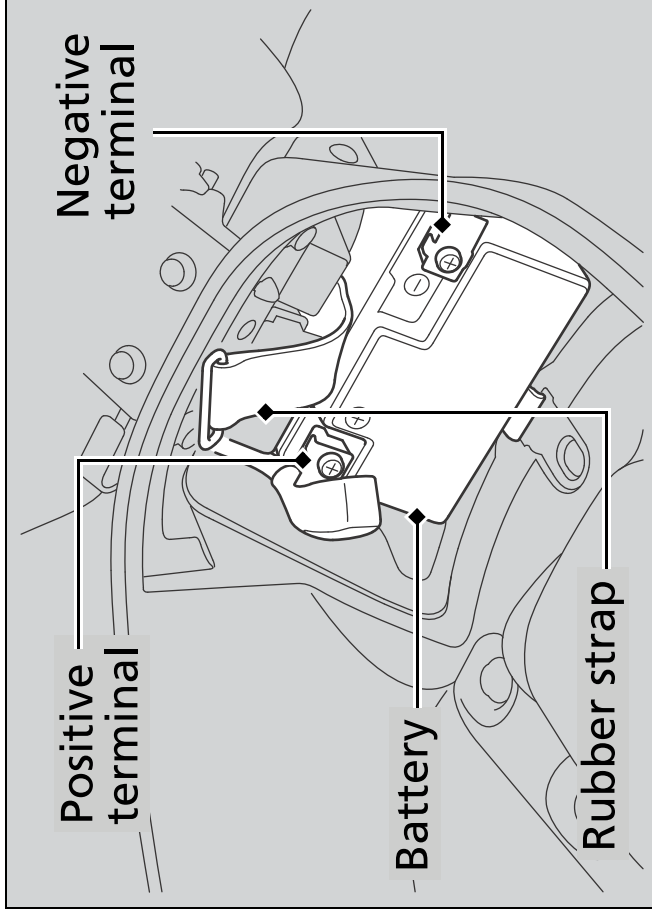

## ■ Removal

Make sure the ignition switch is off.

1. Remove the battery cover. ➔ P. 58
2. Unhook the rubber strap.
3. Disconnect the negative ⊖ terminal from the battery.
4. Disconnect the positive ⊕ terminal from the battery.
5. Pull out the battery taking care not to drop the terminal nuts.

## ■ Installation

Install the parts in the reverse order of removal. Always connect the positive ⊕ terminal first. Make sure that bolts and nuts are tight.

For proper handling of the battery, see “Maintenance Fundamentals.” ➔ P. 49  
 Battery Goes Dead ➔ P. 88