

Crankcase Breather

- 1.** Place a drain pan under the crankcase breather tube.
- 2.** Remove the crankcase breather tube and drain deposits.
- 3.** Reinstall the crankcase breather tube.

