

# When the Idling Stop System Does Not Operate Properly

## Engine Does Not Stop by the Idling Stop System

---

When the Idling Stop system does not operate properly (the Idling Stop switch is at IDLING STOP position), perform the followings.

**If the Idling Stop switch is at IDLING:**

Push the Idling Stop switch to IDLING STOP and check the Idling Stop indicator comes on.

**If the engine is cold:**

Warm up the engine.

**If the scooter does not stop completely:**

Stop the scooter completely. The Idling Stop system operates if the speed is only at 0 km/h (0 mph).

**If the throttle is not closed completely:**

Close the throttle completely.

**If you did not ride the scooter after engine starts:**

Ride the scooter at speeds of over 10 km/h (6 mph). The Idling Stop system does not operate until you ride once.

**If PGM-FI malfunction indicator lamp (MIL) lights:**

When the PGM-FI malfunction indicator lamp (MIL) lights, the Idling Stop system does not operate for protection of the engine. See your dealer.