


## Main Switch

The main switch ① is located on the left side below the front end of the fuel tank. Functions of the respective switch positions are shown in the chart below.

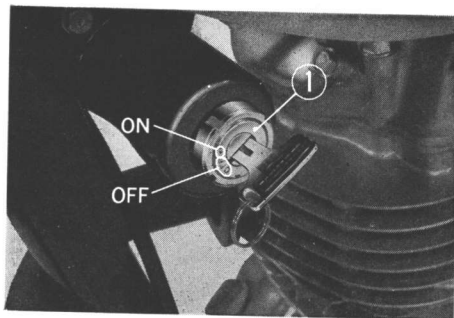

① Main switch

Key Position	Function	Key Removal
OFF	All electrical circuits are open ; engine can not be started.	Key can be removed.
ON (red dot)	Electrical circuits are closed ; engine can be started ; headlight and tail/stoplight can be operated ; neutral indicator light is on when the transmission is in neutral.	Key cannot be removed.