


● Removing battery

1. Raise the seat and remove the tool tray.
2. Loosen the battery holding band.
3. Disconnect the battery cable connector ① and remove the battery.

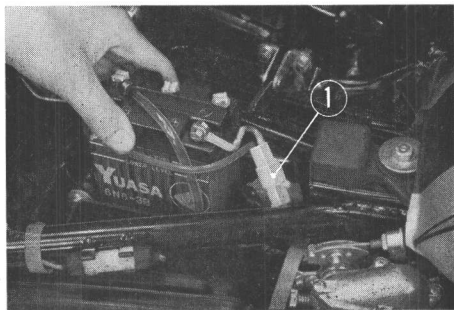

① Battery cable connector

● Replacing final drive and driven sprockets:

When replacing the drive sprocket and the driven sprocket, the drive chain and the rear brake anchor arm (page 24) ① and the rear axle ⑦ (page 25) should be installed in the combination shown on the table below:

	No. of drive sprocket teeth	No. of driven sprocket teeth	No. of drive chain links	Brake anchor & axle position
Standard	15	48	98	A
Option I	15	51 (option)	100 (opt on)	A
Option II	14 (option)	48	98	A
Option III	14 (option)	51 (option)	100 (opt on)	A

NOTE: To increase the clearance between the rear wheel and rear fender, move the rear brake anchor arm and