

Engine Oil


Engine oil quality is the chief factor affecting engine service life. Change the engine oil when specified by the maintenance schedule.

NOTE:

* Engine oil change is performed with engine at normal operating temperature and the motorcycle on the side stand.

1. Remove the oil filler cap from the right crankcase cover.
2. Place an oil drain pan under the crankcase and remove the oil drain plug (1).
3. Operate the kickstarter several times to drain any oil which may be left in the engine.
4. After the oil is completely drained, make sure the sealing washer on the drain plug is in good condition.
5. Reinstall the drain plug.
6. Fill the crankcase with approximately 1.5ℓ (1.6 US quarts) of the recommended grade oil.
7. Reinstall the oil filler cap.

8. Start the engine and allow it to idle for a few minutes.
9. Stop the engine. Make sure that the oil level is at the upper level mark with the motorcycle in an upright position, and that there are no oil leaks.

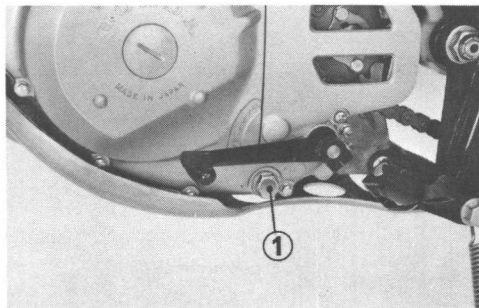

(1) Oil drain plug