Maintenance Schedule

	Item	Break-in Maint.	Regular Maint. Interval	Note:	Refer to page:
	Drive Chain Slider	I	I		97
	Brake Shoe Wear		I		83
	Brake System	I	I		80
	Clutch System	Ī	I		67
	Side Stand		I		95
*	Suspension		I		77
*	Spark Arrester		С		76
*	Nuts, Bolts, Fasteners	Ī	Ī		_
**	Wheels/Tires	I	I		86, 91
**	Steering Head Bearings	I	I		_

Break-in Maintenance: first week of operation, about 200 miles (350 km). Regular Maintenance: every 30 riding days, about 1,000 miles (1,600 km).