

Clutch System


upper clutch cable adjuster (4) all the way in (to provide maximum freeplay).

2. Tighten the lock nut and pull the dust cover (2) back into its normal position.
3. Hold the adjusting nut (5) and loosen the lower lock nut (6) at the lower end of the cable.
4. Turn the lower adjusting nut to obtain the specified freeplay.
5. Hold the adjusting nut and tighten the lower lock nut. Check the adjustment.

Clutch adjuster (on clutch housing):

Major adjustments can be made with the clutch adjuster on the clutch housing.

RIGHT SIDE

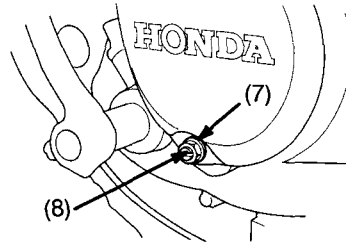

- (7) lock nut
(8) clutch adjuster

1. Loosen the lock nut (3) and turn the upper clutch cable adjuster (4) all the way in (to provide maximum freeplay).