

Wheels

the brake panel. Check that the chain adjusters are installed properly.

2. Adjust the drive chain (page 104).
3. Torque the axle nut to:
63 N·m (6.3 kg-m, 46 ft-lbs)
4. Adjust the rear brake (page 85).
5. Apply the brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.

If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.