
Removal, Cleaning & Replacement

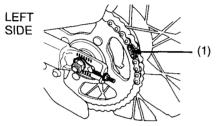

- (1) master link retaining clip
- 1. Remove the master link retaining clip (1) with pliers. Do not bend or twist the clip. Remove the master link. Remove the drive chain.
- 2. Clean the drive chain with a non–flammable (high flash point)

- solvent such as kerosene not gasoline and allow it to dry.
- 3. Inspect the drive chain for possible wear or damage. Replace the drive chain if it has damaged rollers, loose fitting links, or otherwise appears unserviceable.
- 4. Inspect the sprocket teeth for wear or damage. We recommend replacing the sprocket whenever a new chain is installed.
- 5. Lubricate the drive chain.