

Condition and adjustment:

1. Always begin with Step I, then test ride the motorcycle. If the condition still exists, proceed to Step II and again test ride the motorcycle.

STEP \ Condition	I	II	
	Compression damping	Air pressure	Oil volume
The entire range of travel is too hard.	Reduce	Reduce	—
The entire range of travel is too soft (bottoming).	Increase	Increase	—
Initial travel is good, but the final stages of travel are too soft (bottoming).	—	—	Increase
The initial stages of travel are good but the final stages are hard.	—	—	Reduce
The initial stages of travel are too soft, but the final stages are good.	—	Increase	Reduce
The initial stages of travel are too hard, but the final stages are good.	—	Reduce	Increase