

BRAKES

Front Brake

This model has hydraulic disc front brake. As the brake pads wear, brake fluid level drops, automatically compensating for wear.

Fluid level, brake lever free play and pad wear must be inspected periodically. The system must be inspected frequently to ensure there are no fluid leaks. If the control lever free play becomes excessive and the brake pads are not worn beyond the recommended limit (page 80), there is probably air in the brake system and it must be bled. See your authorized Honda dealer.

Brake Fluid Level:


▲ WARNING

* **Brake fluid may cause irritation. Avoid contact with skin or eyes. In case of contact, flush thoroughly with water and call a doctor if your eyes were exposed.**

Brake fluid must be added to the reservoir whenever the fluid level begins to reach the LOWER level mark (1).

Remove the screws (2), reservoir cover (3), and diaphragm (4). Fill the reservoir with DOT 4 BRAKE FLUID from a sealed container up to the upper level mark.

Reinstall the diaphragm. Tighten the screws securely.

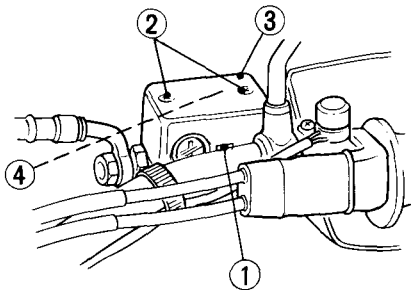

- (1) Lower level mark (4) Diaphragm
(2) Screws
(3) Reservoir cover