


## HEADLIGHT BEAM ADJUSTMENT

The headlight beam can be raised or lowered. Turn the adjusting screw (1) to move the headlight up or down to the proper adjustment.

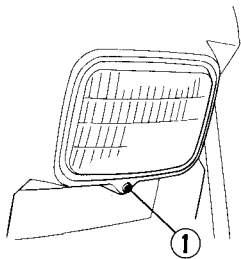

(1) Adjusting screw