


BRAKE PAD WEAR

(Refer to the maintenance precautions on page 52).

Brake pad wear will depend upon the severity of usage, type of riding and condition of the riding area. The pads (1) will wear faster on dirty and wet area. Inspect the pads visually during all regular service intervals to determine the pad wear. If either pad wears to the wear limit (2), both pads must be replaced.

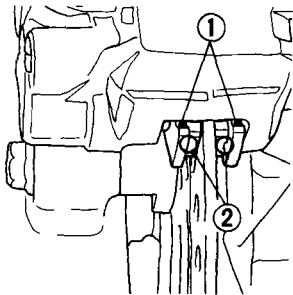

(1) Pads

(2) Wear limit

NOTE:

- * Use only genuine Honda replacement friction pads offered by authorized Honda dealers. When brake service is necessary consult your Honda dealer.