

6. Reinstall the oil filler cap/dipstick. Check for oil leaks.


**CAUTION:**

**\* Running the engine with insufficient oil can cause serious engine damage.**

**NOTE:**

**\* The engine contains a crankcase oil level check bolt (4). Remove the bolt and check that the level is flush with the lower edge of the hole.**

If it is, start the engine and check the engine oil level. If the crankcase oil level is low, add the recommended engine oil before starting the engine to check the engine oil level.

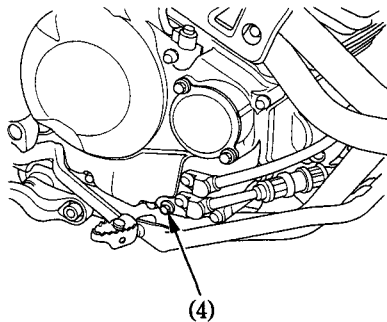

(4) Crankcase oil level check bolt