INSTRUMENTS

METER

Speedometer

The Speedometer indicates vehicle speed in kilometres per Hour.

Odometer

The Odometer indicates distance travelled in Kilometres. The last digit indicates in 100m intervals.

Trip Meter

The Trip Meter can be rest to "0" to show distance travelled for any given trip.

