

Battery and Fuses

Left Side Cover

The battery and fuses can be accessed by removing the left side cover.

Removal:

1. Remove the two bolts at the front part of the left side cover.
Then remove the remaining two bolts at the rear of the cover.
2. Release catches at the back to remove the cover.

Installation:

1. Insert the rear catches of the cover into location.
2. Secure two front bolts, then the rear bolts.

