

## Suspension

---

### Rear cushion adjustment:

The rear cushion can be adjusted to suit the rider's weight and riding conditions.

### Adjusting the compression damping:

Adjustment can be done by winding the adjuster with a flatblade screwdriver. Damping is increased by turning the adjuster clockwise and vice versa.

The default setting is turning the adjuster clockwise to its full stop then winding back for the following number of "clicks"

(The punched mark should be aligned with the adjustment mark):

**7 to 10 clicks**

- **Do not force the adjuster to turn.**

