

Suspension

Damping adjustment:

An adjuster is located at the lower part of the rear cushion main body and is accessible from the left side of the motorcycle.

A flat blade screwdriver is required to make the adjustment. Damping can be increased by turning the adjusting screw clockwise and vice versa.

The default setting is turning the adjuster clockwise to its full stop then winding back for the following number of "clicks"

(The punched mark should be aligned with the adjustment mark):

10 to 13 clicks

- **Do not force the adjuster to turn.**

