

## Refuelling

---

2. Fill petrol to the bottom end of the fuel level plate.

NOTE: Fuel above the bottom end of the plate may spill out from the fuel tank cap breather.

3. Turn the fuel tank cap clockwise fully and turn the key counterclockwise to lock. Then close the key cover.

The key cannot be released unless the fuel tank cap is secured and locked.

### Manual Fuel Shut-Off Valve:

The valve lever position indicates the fuel selection:

**ON :** Fuel flows to the carburettor. The engine should be started with the valve at this position.

**OFF :** Fuel is shut-off. The lever should be set to this position whenever the motorcycle is left unattended.

**RES :** If fuel has run out while riding, select this position and refuel as soon as possible. Make sure the lever is returned to ON position after refueling to prevent reserve fuel starvation.

Reserve fuel capacity:

**Approx. 3.5 ltrs**

ON    OFF    RES

