


Engine oil temperature-viscosity chart

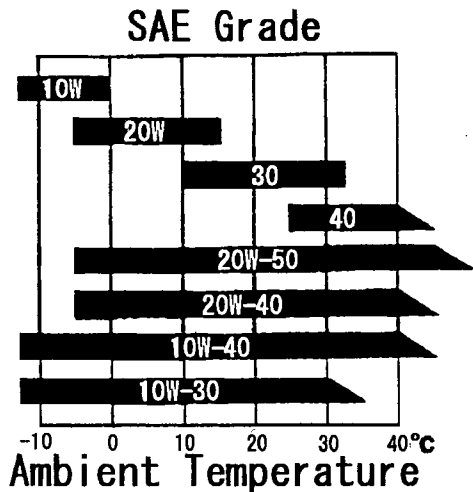

Oil change intervals:

Initial: 1,000km

Subsequent: every 6,000km

Please consult your Honda dealer for the oil change.