

## Drive chain

Extend the side stand and let the motorcycle lean on it. Move the drive chain up and down at the midpoint between the two sprockets. The chain slack should be within the following range:


### Drive chain slack: 30 - 40mm

Adjust the tension if the slack is beyond the above range.

Never ride the motorcycle if the chain slack is in excess of 60mm.

Hold the motorcycle upright and move it back and forward to check the smooth chain movement. If the chain does not travel smoothly or if you hear any noise, the chain should be inspected.

Please consult your Honda dealer for the drive chain adjustment.

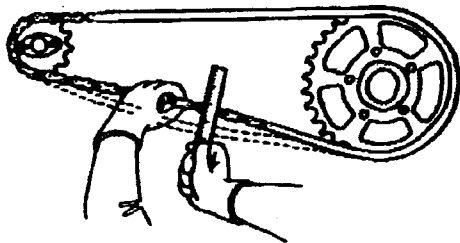

Drive chain slack

