

Clutch free play adjustment


The free play can be adjusted either at the clutch lever end or the clutch adjuster at the end of the clutch cable. However, it is recommended that you adjust the lower adjustment first.

- Loosen the lock nut and turn the adjuster to adjust.
- Secure the lock nut after the adjustment.

After securing the lock nut, re-check the clutch free play at the lever and, if necessary, make fine adjustment at the lever.

Also, start the engine and select each gear to check smooth engagement and disengagement. The engine should not stall or jump forward.

[Primary adjustment]

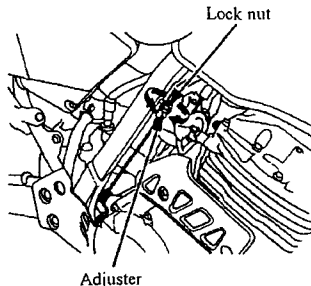

[Secondary adjustment]

