

---

## Fuses

### Fuse inspection/replacement

Turn off the ignition switch and make sure that the fuses are not blown. If any of the fuses are blown, replace with a fuse of the same rating. Use of over-rated fuses may result in damage to the wiring or sensitive components.

If the replaced fuse blows again, further troubleshooting should be carried out. Replace the fuse only after identifying and rectifying the defect.

#### **Tips:**

When installing electrical parts, always use genuine Honda parts and accessories. Other brands may overload the circuit blow fuses or flatten the battery.

