

Air filter


Replacing the air filter element

1. Turn quick-release screws 90deg.to the left to unlock and open the air filter cover.
2. Unhook the set spring and take out the air filter element.
3. Firmly insert the replacement air cleaner element.
4. Refit the air-filter cover and secure the quick-release screws.

Tips:

- If the air filter element is loose, dust and debris may enter the intake manifold and wear the cylinder, resulting in reduced performance and reduced engine life.
- Avoid applying water to the air filter when washing your motorcycle. Water in the air filter may cause engine starting trouble.

Quick screws

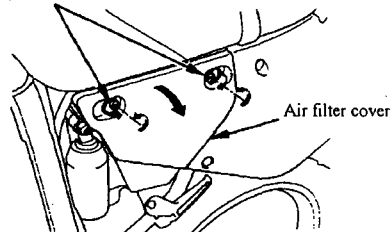

Air filter element

