

## Engine troubleshooting

---

If the engine does not start or stalls, please check the following points:

- The engine is started in accordance with the starting procedure in this manual.
- There is sufficient fuel in the fuel tank.
- The engine stop switch is at RUN position. If the switch is at OFF position, please follow the procedure below:
  1. Leave the engine stop switch at OFF position.
  2. Fully push in the choke lever.
  3. Fully open the throttle.
  4. Turn the ignition switch ON.
  5. Engage starter for 5 to 10 seconds to crank the engine.
  6. Now set the engine stop switch to RUN position and follow the starting procedure described elsewhere in this manual.

### Repair/Maintenance

- Please contact your Honda dealer for repairs and maintenance.
- The best way to maximise your motorcycle's life is to have it regularly serviced by an authorised Honda dealer.