


### Spring Preload:

Preload should be adjusted when the engine is cold because it is necessary to remove the muffler.

An optional pin spanner is available for turning the lock nut and adjusting nut to adjust spring preload.

1. Remove the seat (page 48 ).
2. Remove the right side cover (1).
  - ① Remove the two bolts (2).
  - ② Pull the right side cover.
3. Remove the muffler (3).
  - ① Loosen the muffler clamp bolt (4).
  - ② Remove the lower (5) and upper muffler bolts (6).
  - ③ Pull the muffler away from the exhaust pipe.

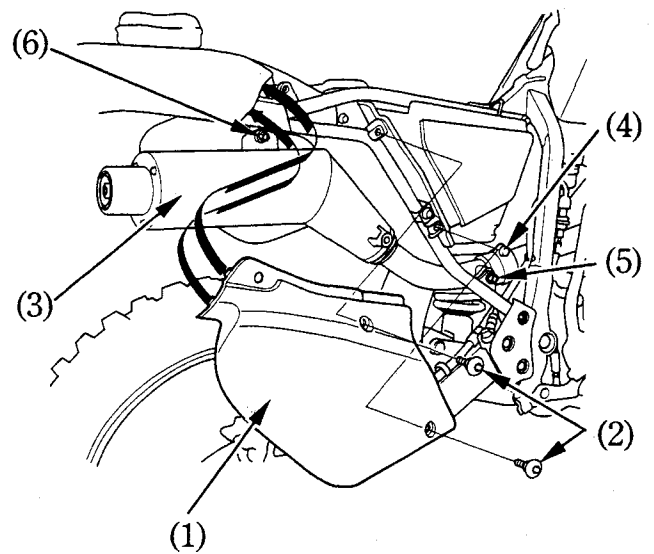

- |                      |                          |
|----------------------|--------------------------|
| (1) Right side cover | (3) Muffler              |
| (2) Bolts            | (4) Muffler clamp bolt   |
|                      | (5) Muffler bolt (lower) |
|                      | (6) Muffler bolt (upper) |