

4. Install the filter with the rubber seal (5) facing out, away from the engine. You will see "OUT-SIDE" mark (6) on the filter body, near the seal.

NOTICE

Improper installation of the oil filter can cause serious engine damage.

5. Reinstall the oil filter cover, making sure the bolts are tightened securely.


Oil Filter Bolt Torque:

12 N·m (1.2 kgf·m, 9 lbf·ft)

6. Perform steps 5 – 9 of Engine Oil Change.

Engine oil after draining and oil filter change:

1.8 ℓ (1.9 US qt, 1.6 Imp qt)

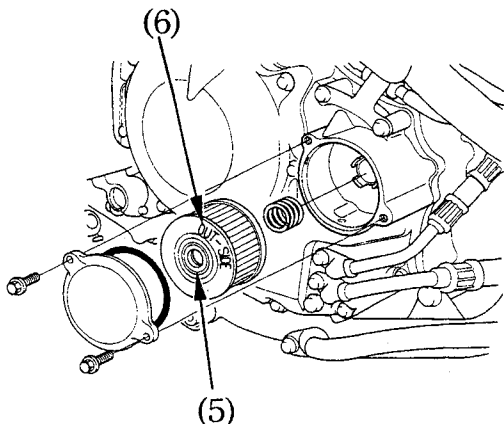

(5) Rubber seal
(6) OUT-SIDE mark