

# Starting the Engine

Always follow the proper starting procedure described below.

## Preparation

Before starting, insert the key and turn the ignition switch ON.

Make sure that the transmission is in neutral and the engine stop switch is at RUN. Turn the fuel valve ON.


## Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

### Normal Air Temperature

10°–35°C (50°–95°F)

LEFT  
SIDE

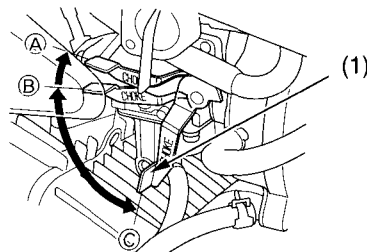

(1) choke lever

(A) fully ON  
(B) detent position  
(C) fully OFF

1. Pull the choke lever (1) up all the way to fully ON (A).