

# Starting the Engine

Always follow the proper starting procedure described below.

## Preparation


Make sure that the transmission is in neutral and the engine stop switch is at RUN. Turn the fuel valve ON.

## Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

Normal Air Temperature  
10° – 35°C (50° – 95°F)

LEFT  
SIDE

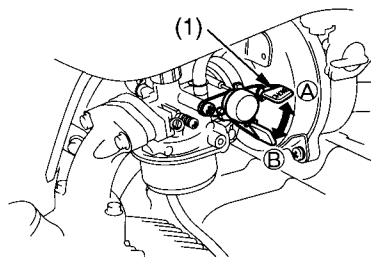

(1) choke lever

(A) fully ON  
(B) fully OFF

1. Pull the choke lever (1) up all the way to fully ON (A).