


Clutch System

Refer to *Safety Precautions* on page 47.

Clutch Freeplay

LEFT SIDE

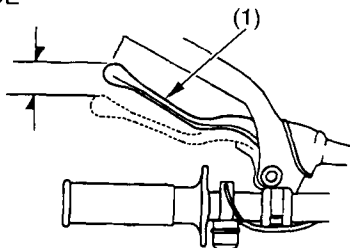

(1) clutch lever

Inspection

Check freeplay.


Freeplay: 10–20 mm (0.4–0.8 in)

If necessary, adjust to the specified range.

Upper Adjustment

Minor adjustments are generally made with the upper clutch cable adjuster.

LEFT SIDE

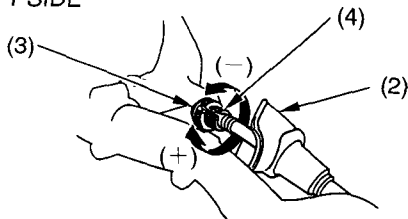

(2) dust cover

(3) lock nut

(4) upper clutch cable adjuster

(+) increase freeplay

(-) decrease freeplay

1. Pull the rubber dust cover (2) back.
2. Loosen the lock nut (3).
3. Turn the upper clutch cable adjuster (4) to obtain the specified freeplay.