


## Engine servicing

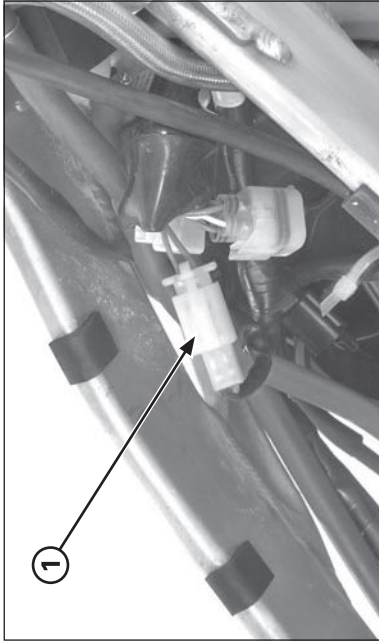


(1) 2P (NATURAL) CONNECTOR

### Radiator Removal/Installation

#### Remove the following:


- Exhaust pipe
- Skid plate
- Fuel tank/injector assembly (page 4-6)

Disconnect the radiator 2P (Natural) connector.

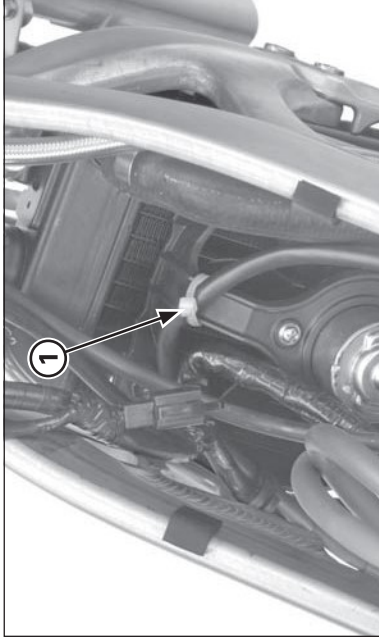


(1) TIE WRAP

Remove the spark plug wire tie-wrap from fan motor shroud.

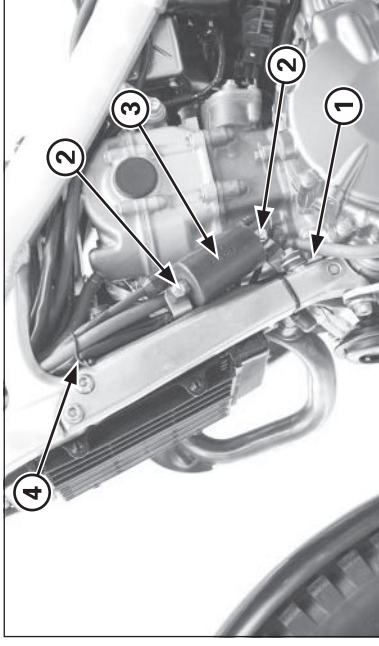

(1) GROUND EYELET  
(2) BOLTS (3) IGNITION COIL  
(4) WIRE CLAMP

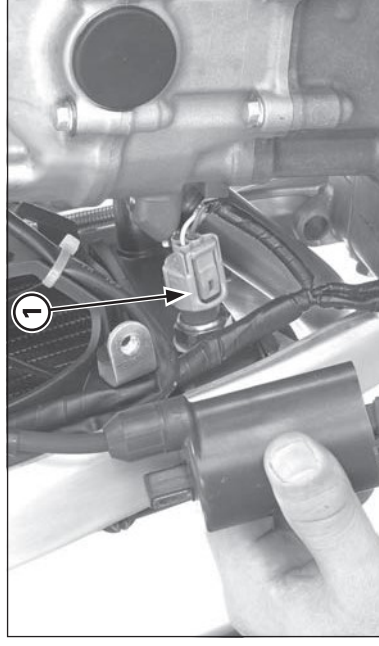

(1) 3P (GRAY) CONNECTOR (2) CLAMP

Remove the ground eyelet bolt.  
Remove the ignition coil mounting bolt.

Remove the spark plug wire/wire harness/breather hose clamp.

Disconnect the ECT sensor 3P (Gray) connector.