


Instruments

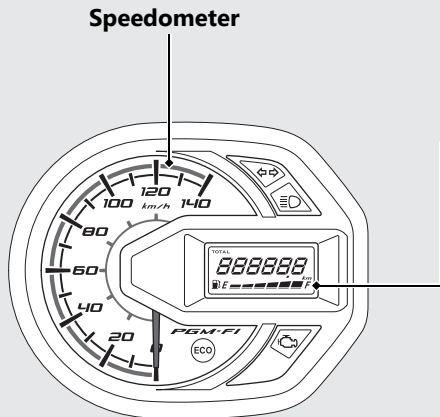

Display Check

When the ignition switch is turned to the **I** (On) position, the speedometer needle swings to the maximum scale on the dial once, all the mode and digital segments will show. If any parts of these displays do not come on when it should, have your dealer check for problems.